


AIR SAW

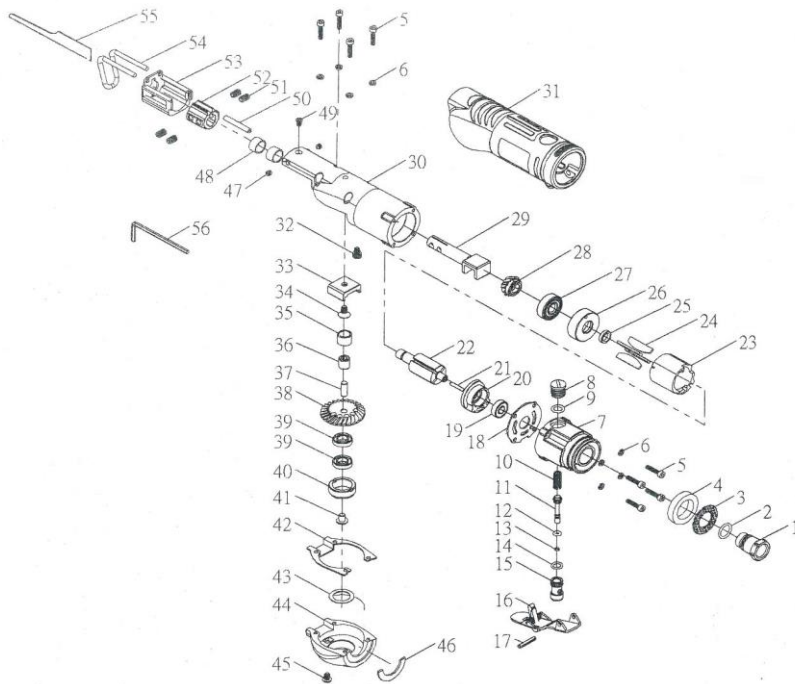

HCT-BS354

Consumable parts No.8, 9, 10, 11, 12, 13, 14, 15, 24, 51, 55

Index No.	Parts No.	Description	Q'ty
1	354001	Inlet Bushing	1
2	ORP-AS013	O-Ring	1
3	354002	Exhaust Nut	1
4	602026	Muffler	1
5	B2-0315A	Screw	8
6	SWI-030A	Spring Washer	8
7	354003	Valve Case	1
8	AR-38012	Throttle Valve Plug	1
9	ORP-AS011	O-Ring	1
10	AR-38002	Spring	1
11	354017	Valve Stem	1
12	ORP-0030	O-Ring	1
13	352037	O-Ring	1
14	ORP-S7	O-Ring	1
15	354019	Valve Bushing	1
16	377026	Safety Lever	1
17	SP-30180	Pin	1
18	354004	Washer	1
19	BB-06962	Ball Bearing	1
20	354020	Rear End Plate	1
21	SP-25120	Spring Pin	1
22	375D03	Rotor	1
23	3200-24	Cylinder	1
24	XP-ADG14-33	Blades	4
25	309A21	Spacer	1
26	354022	Front End Plate	1
27	BB-06082	Ball Bearing	1
28	354005	Pinion Gear	1

Index No.	Parts No.	Description	Q'ty
29	354006	Shaft	1
30	354008	Motor Housing	1
31	354007	Grip Rubber	1
32	B2-0405A	Hexagon Socket Head Bolt	1
33	354009	Slippery Chuck	1
34	S5-0508C	Screw	1
35	354010	Drive Roller	1
36	HK-0509	Needle Bearing	1
37	NR-50128	Pin	1
38	354011	Bevel Gear	1
39	BB-0688	Ball Bearing	2
40	354015	Washer	1
41	BS-0506	Screw	1
42	354018	Washer	1
43	PW-1420-0.5	Washer	1
44	354012	Crank Case	1
45	BS-0406	Screw	1
46	354013	Washer	1
47	SS-0403A	Set Screw	2
48	BM1008	Bush	2
49	S5-0306A	Screw	1
50	NR-40278	Pin	1
51	SS-0508A	Set Screw	4
52	354016	Collet	1
53	354014	Slide Pin Case	1
54	354023	Work Guide	1
55	301035A-COBALT	Saw Blade(32T)	1
56	317049	Hexagon Wrenchen Key	1